


SacCityCorvette.com


COOL IT High/Low Speed Fan Controller C5 installation instructions. Please read through instructions thoroughly before starting install!




Step 1 Remove fuse relay cover.

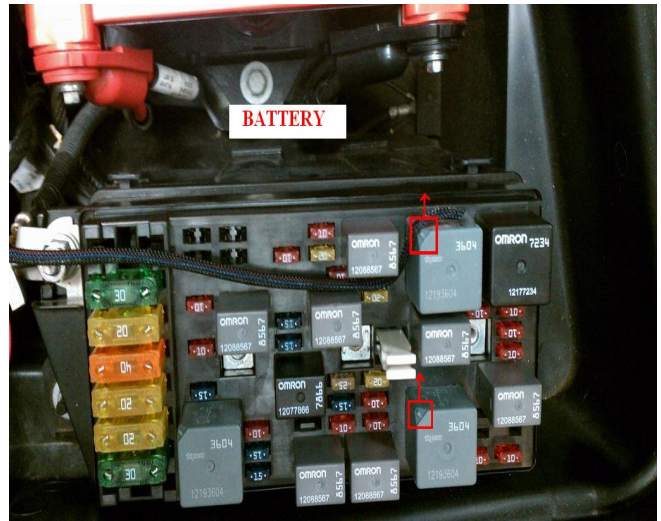


Step 2 With cover removed confirm the internal Configuration is the same as the one in picture. **DO NOT INSTALL COOL IT if notches are facing the head lights!** Note wire routing for High Speed Single Fan Operation.

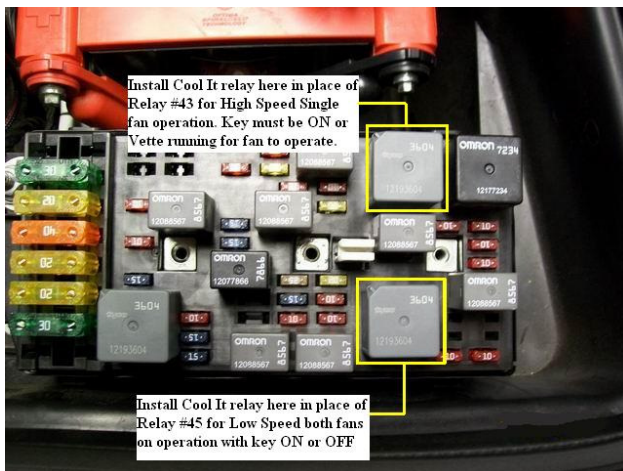

Step 3 Decide which configuration you want to run.

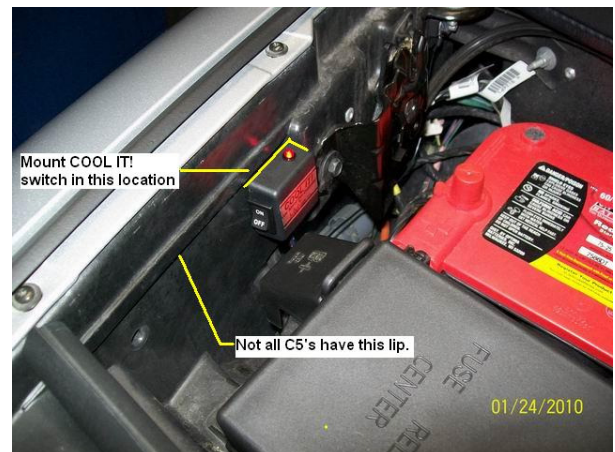

Step 4 This is where the COOL IT switch should be mounted.

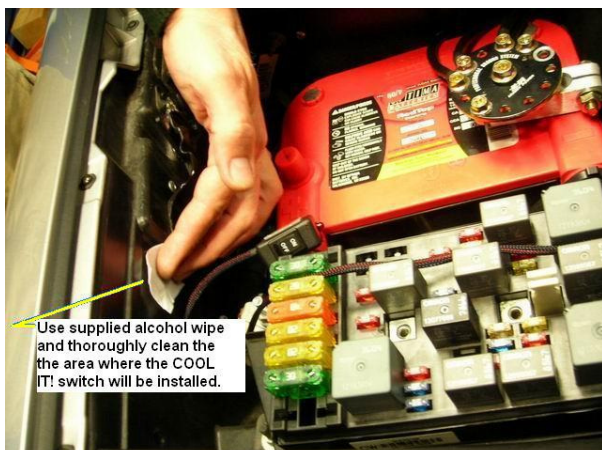

Step 5 Use supplied alcohol wipe and thoroughly clean area.




Step 6 **IMPORTANT!** Use hair dryer to warm the location where the switch will be mounted. VHB tape will **NOT STICK** to cold surface. Warming the surface is very important for initial install!




Step 7 Test fit COOL IT! switch so you know exactly where it goes before peeling backing off tape and installing the switch. **WARNING!** Once tape makes contact it is very hard to remove. Removing may also damage tape. Make sure you align exactly where you want it before sticking.




Step 8 Apply to warm location and press and hold firmly for 30 seconds to 1 minute. 1 minute is better.

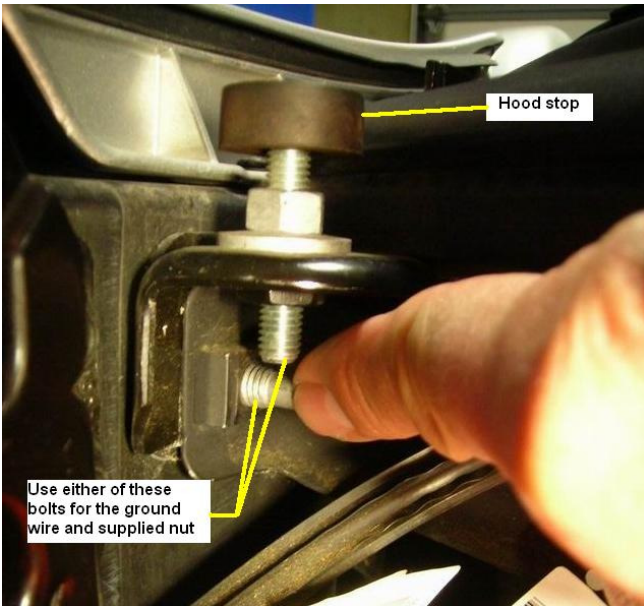


Step 9 Two ground locations are available. If you're C5 does not have enough threads on the lower bolt you can use the hood stop bolt. Using the hood stop bolt will require loosening the locknut and raising the stop just enough to install the ground wire and supplied nut. Then lower the stop back to the original height. Check that hood closes properly before continuing. Then tighten nut. Don't over tighten!

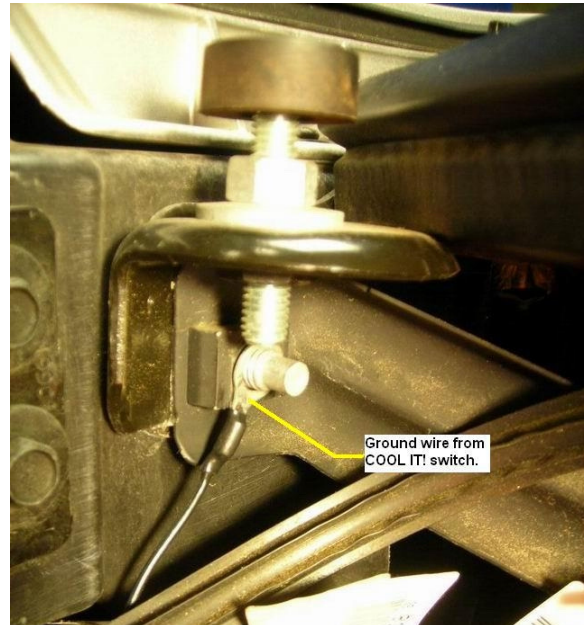

Step 10 Install ground wire fro COOL IT! switch.

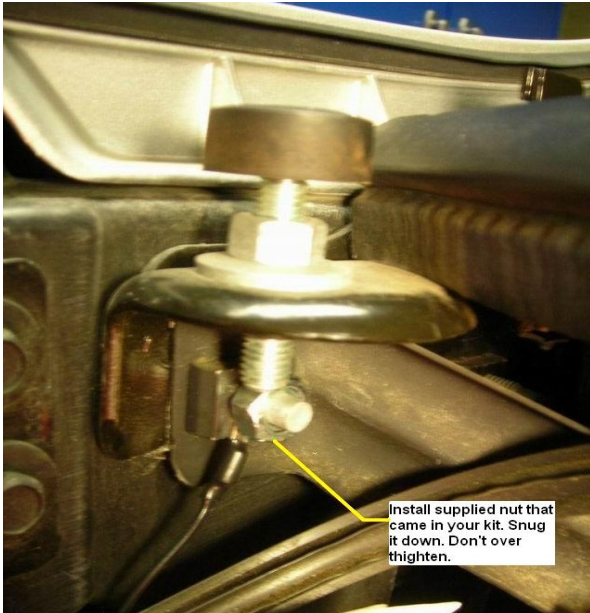


Step 11

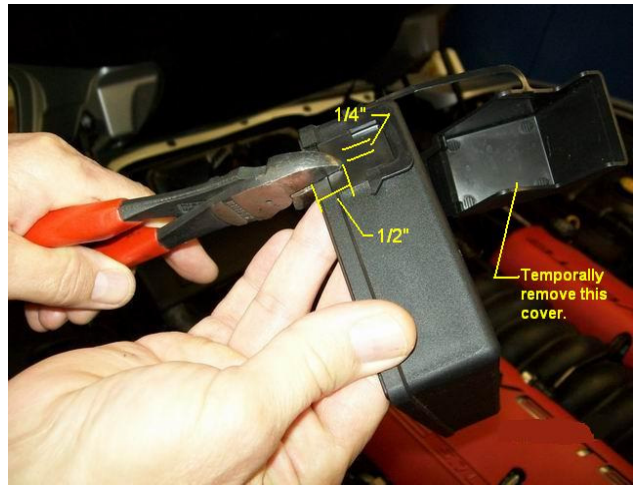

Step 12 This is the only modification you will need to make. Using wire cutters, cut a slot in the center of this area where you Removed the plastic cover. Make it 1/2" X 1/4".



Step 13 Finished slot.

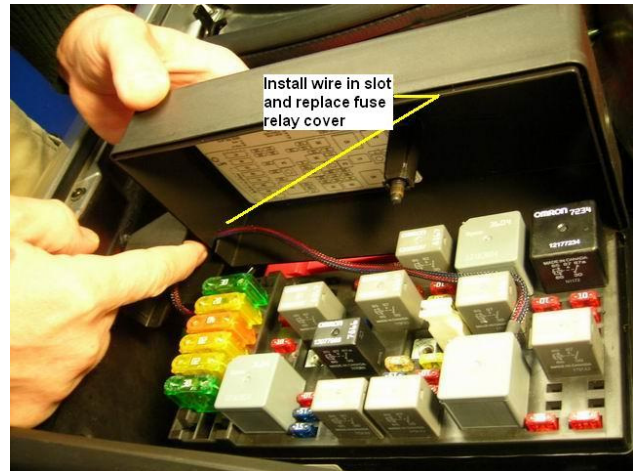

Step 14 Carefully guide wire into the slot and reinstall cover.



Step 15 Turn switch on, you should here the fans running!



You have just improved performance and it looks COOL too!

